



A*1pair	B*1pc	C*4pc s	D*3pcs	E*2pcs	F*6pcs	G*1pc	H*2pcs	I*2pcs
J*1pc	K*1pc	L*1pc	M*1pair	N*2pcs	O*2pcs	P*2pcs	Q*2pcs	


Step 1: Use below pattern to find out the screw hole position.

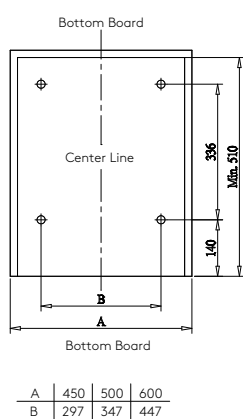

Step 2: Screw frame onto "L" plate.

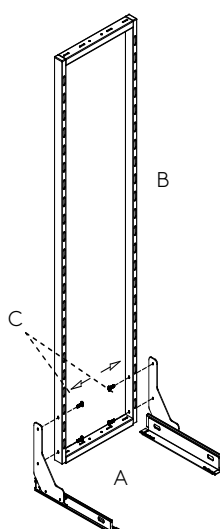


Step 3: Screw the assembled frame onto bottom board. Also set the side support channel 'D' to side partition.

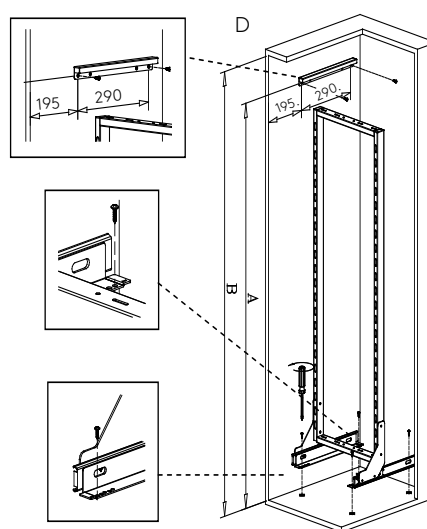


	A	B
B05600SC	1226	Min. 1260
B05650SC		
B05660SC		
B05800SC	1806	Min. 1840
B05850SC		
B05860SC		

Step 4: Put cover slip on slide

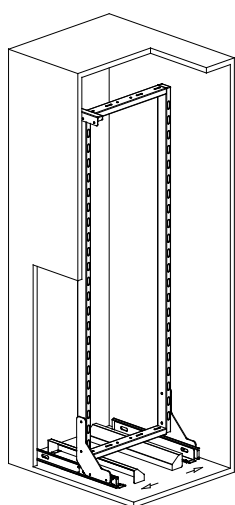


Step 5: Connect guide bracket with support channel.


Assembling guide bracket.

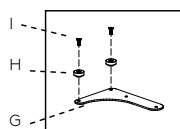




Install the wheel of guide bracket to support channel.

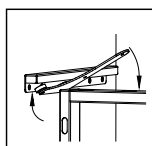

Fix the guide bracket to Rear Frame.




Step 6: Fix the top and bottom hinge on corner of cabinet.

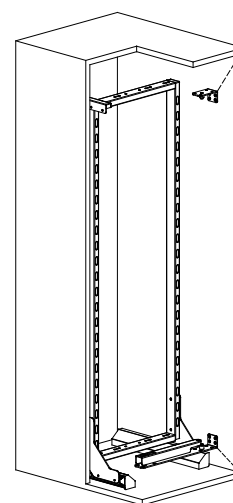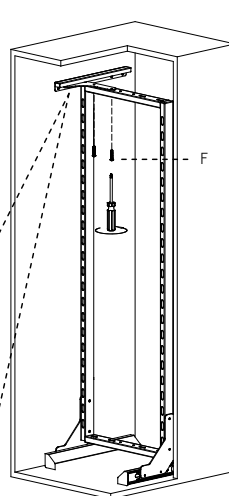


K


J




Step 7: Insert extension pole to swivel frame, fixed by two screw on bottom extension pole.

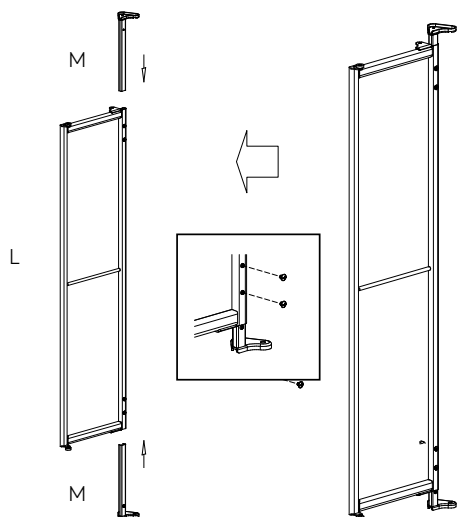


Step 8: Join Swivel Frame with hinge by screw "N".

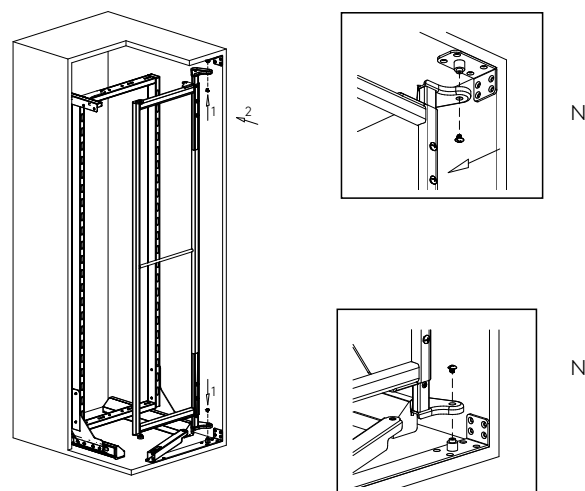

Step 9: Screw the soft close mechanism to bottom extension pole.

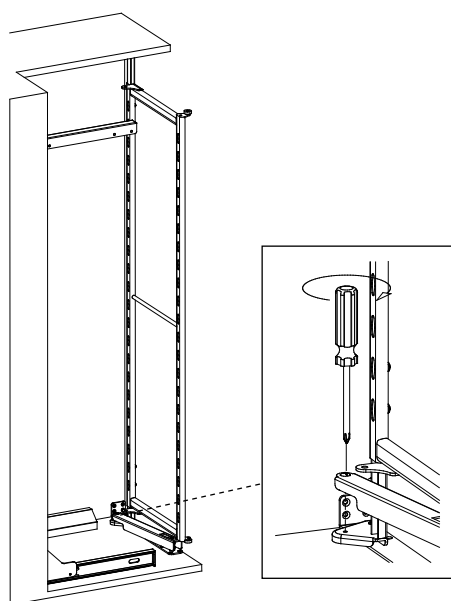

Step 10: Connect follower arm between Swivel Frame and Rear Frame.

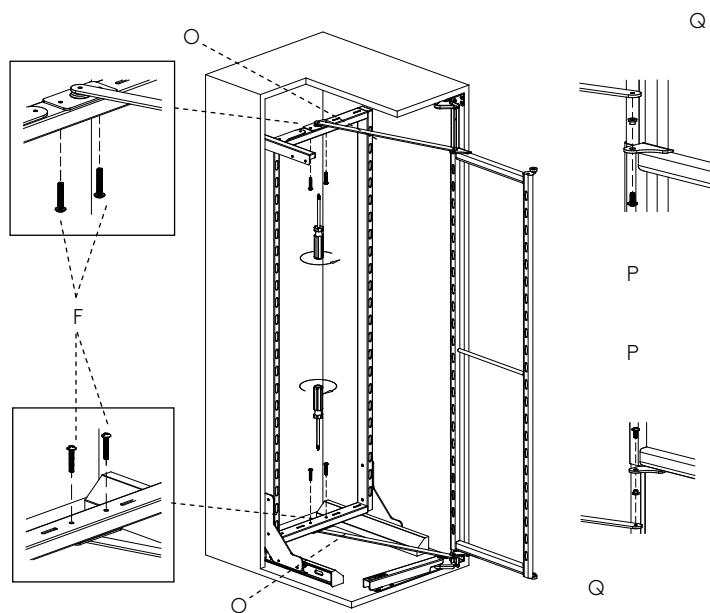

Step 11: Use below pattern to fine out the screw hole for support channel "D" on door panel. Screw support channel on door panel with last screw only.

Step 12: Pull out Swivel Frame to join with support channel, then tighten support channel by screw on door panel.

